


Wiring

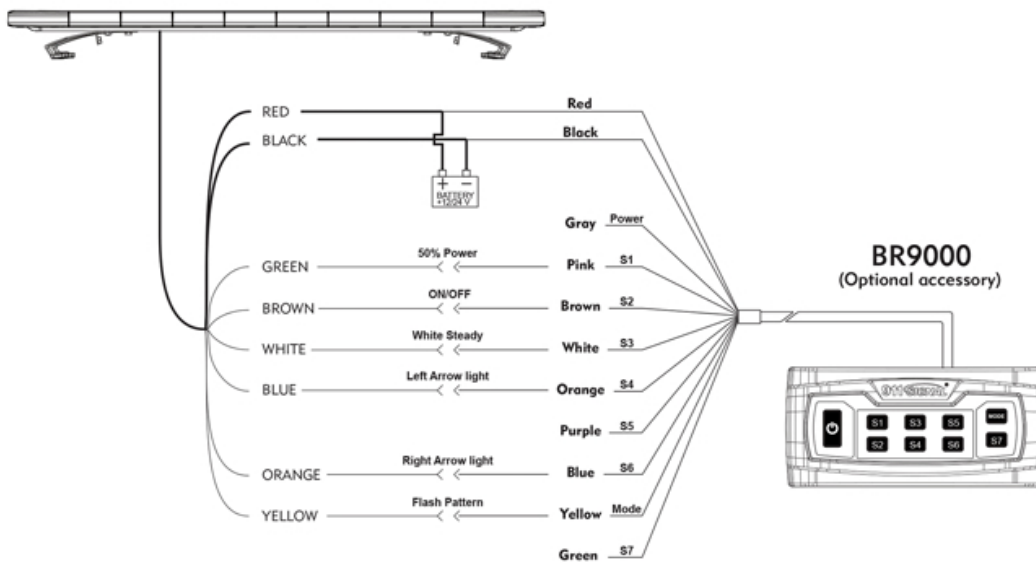

Flash Patterns

- | | | |
|-------------------|----------------|--|
| 1. Random | (default) | |
| 2. 125PCM ECE R65 | (ALL) | |
| 3. 125PCM ECE R65 | Double | |
| 4. 125PCM ECE R65 | single (ALL) | |
| 5. 125PCM ECE R65 | Double (ALL) | |
| 6. 125PCM ECE R65 | single (Split) | |
| 7. 125PCM ECE R65 | Double (Split) | |
| 8. 75PCM Single | (ALL) | |
| 9. 75PCM Double | (ALL) | |
| 10. 75PCM Quad | (ALL) | |
| 11. 75PCM Quint | (ALL) | |
| 12. Single-Quad | (ALL) | |
| 13. 75PCM Single | (Split) | |
| 14. 75PCM Double | (Split) | |
| 15. 75PCM Quad | (Split) | |
| 16. 75PCM Quint | (Split) | |
| 17. Single-Quad | (Split) | |
| 18. 75PCM Single | (I/O) | |
| 19. 75PCM Double | (I/O) | |
| 20. 75PCM Quad | (I/O) | |
| 21. 75PCM Quint | (I/O) | |
| 22. 75PCM Single | (Split1) | |
| 23. 75PCM Double | (Split1) | |
| 24. 75PCM Quad | (Split1) | |
| 25. 75PCM Quint | (Split1) | |
| *26. 75PCM Single | (Split2) | |
| *27. 75PCM Double | (Split2) | |
| *28. 75PCM Quad | (Split2) | |
| *29. 75PCM Quint | (Split2) | |

* These four flash patterns not included with the 10-module configuration.

* Flash Patterns Reset: Press and hold MODE switch more than 5 seconds, Alley light will Steady on.